

OPTISTORE V3

PC Programming Tool

Optistore V3 is a NEW Windows application, allowing quick and accurate communication with Optidrives for parameter management, network monitoring & firmware upgrades

Key Benefits

Optistore V3 now replaces the existing Optistore Plus with the following new features:

- Firmware upgrades of Optidrive Plus & VTC now possible
- Plug and go, simple and easy PC control
- Individual drive or drive network management including monitoring and control
- PC based data storage and file management
- Parameter set transfer to or from Optidrives
- Fully compatible with Optiwand PDA, pocket PC software
- File management: naming, storing, printing, emailing etc.
- Parameter Export facility allows the user to insert parameter settings in other programs (e.g. Microsoft Word; *.rtf or *.txt formats)

Optidrive Compatibility

The software is compatible with the following Optidrive Products:

- Optidrive Plus 3^{GV} (including Vertical Market Solutions and all IP & NEMA ratings)
- Optidrive VTC
- Optidrive E2 (Standard, 1 phase output and all IP & NEMA ratings)
- Optidrive Compact

System Requirements

Supported Operating Systems	Windows Vista; Windows XP
Processor	400MHz Pentium processor or equivalent (Minimum); 1 GHz Pentium processor or equivalent (Recommended)
RAM	96 MB (Minimum); 256 MB (Recommended)
Hard Disk	Up to 2MB of available space may be required
Display	800 × 600, 256 colours (Minimum); 1024 × 768 high colour, 32-bit (Recommended)
Additional Software	Microsoft .NET Framework 3.5 or later is required. If required, OptiStore will initiate a download from the Microsoft website and install .NET framework automatically.
Additional Hardware	Communication with the Optidrive requires an RS485 data connection. Most computers DO NOT have this connection. Invertek Drives recommends the use of the USB to RS485 Adaptor (Invertek Part: OD-485AD)

